 


GODOX设计文件备注			
产品名称	神牛-LED6Bi		
系列名称	<input type="checkbox"/> 无线 <input type="checkbox"/> 有线 <input type="checkbox"/> 无线 <input type="checkbox"/> 有线 <input type="checkbox"/> 无线 <input type="checkbox"/> 有线 <input type="checkbox"/> 无线 <input type="checkbox"/> 有线	版本	A
产品型号	705-LED6BY-00	版本	A
零件尺寸(mm)		最大尺寸(mm)	88*88 MM
尺寸公差	±0.05mm		
材料	ABS+PC+PMMA		
加工工艺	注塑		
表面处理	喷油、喷涂印刷		
设计行	设计	校对	输入人

# LITEMONS

## 双色温LED摄影灯 LED 6Bi

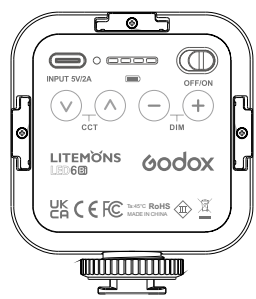

使用手册  
Instruction Manual

### 前言

双色温LED摄影灯LED6Bi, 可变色温, 适用于近距离拍摄、视频拍摄、微电影、直播、视频会议、人像拍摄、静物拍摄等。可安装在相机热靴槽使用, 或者独立使用, 也可以组合使用, 操作简单、轻巧便携。

 
#### 主要特点:

- 可自由调节色温和亮度。
- 内置锂电池, 支持Type-C USB接口充电。
- 带一个冷靴安装座和三个冷靴槽, 可安装在热靴或者冷靴槽里使用, 冷靴槽可组合多个灯或者拓展其他器材配件使用。
- 外观时尚, 操作简单, 轻巧便携。

### 警告

- △ 本产品不能防水, 在雨天及潮湿环境下请注意防水。
- △ 请勿在化学品、可燃性气体或其他特殊物质附近使用灯, 有可能导致火灾或电磁干扰。在这些场合下, 请注意相关警告标识。
- △ 内置锂电池, 禁止拆卸、撞击、挤压或投入火中。若出现严重鼓胀, 请勿继续使用。请勿放置在超过-10°C - 40°C的环境中。使用产品差参数的充电器进行充电, 并且正确的按照操作说明, 在规定的电压、温度范围内使用。

### 部件

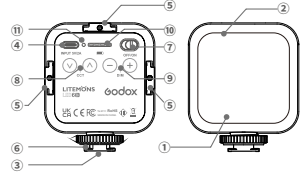

- 01. 灯珠
- 02. 柔光片
- 03. 1/4螺孔冷靴安装座
- 04. Type-C USB充电接口
- 05. 冷靴槽
- 06. 冷靴座
- 07. 开关按钮
- 08. 色温调节按钮
- 09. 亮度调节按钮
- 10. 电池电量指示灯
- 11. 按键指示灯

### 标配物品

- 灯体 \*1
- 柔光罩 \*1
- Type-C USB线 \*1
- 说明书 \*1

### 电池

1. 本品采用1800mAh锂电池, 内置在产品里面不可拆卸, 使用寿命较长。
2. 安全可靠, 内置电路有过充保护、过放保护、过流保护、短路保护。
3. 使用5V 2A充电器充电, 电池指示灯不闪烁为充满。

#### 注意事项:

1. 充电不要放置超过24小时。
2. 应放置于凉爽、干燥、通风的地方储存。
3. 不要靠近和放置于火中。
4. 电池使用后请及时按当地的规定处理。
5. 长期不使用, 请充电至电量指示灯3格再放置。
6. 为了延长电池使用寿命, 建议每3个月进行一次充电保养。
7. 电池有一定的寿命限制, 使用一定时间后, 性能会减弱, 属正常现象。
8. 建议将电量充满2格后, 用户可在长时间周边充电状态下将亮度调节到100%。
9. 电池电量用完后, USB供电电压边用不能大于6档亮度。

### 操作说明

- 1.1. 开关机  
开关推至ON, 灯打开, 推至OFF灯关闭。

#### 1.2. 色温调节

按向上键●增加色温值, 按向下键●减少色温值, 长按可快速调节, 色温值调节范围3200K-6500K九档可调, 调节达到极值指示灯闪烁。

#### 1.3. 亮度调节

按●号键增加亮度值, 按●号键减少亮度值, 长按可快速调节, 十档可调, 调节达到极值指示灯闪烁。

#### 1.4. 固定和拓展

通过冷靴座可固定在带冷靴/热靴的物品上。通过冷靴座的1/4" 螺纹孔固定在带1/4" 螺纹的物品上(如云台、三脚架、灯架)。三个冷靴槽可拓展带冷靴的物品。多个灯可组合在一起使用。



### 产品参数

型号	LED6Bi
内置锂电池	1800mAh
充电电压	5V/2A
功率	最大6W
色温范围	3200K - 6500K(九档可调)
100%光照度	360
(LUX)(0.5m)(=)	
CRI(=)	95
调光范围	十档可调
持续使用时间	1.5H-10H
工作环境温度	-10~45°C
产品尺寸	77*66*30 mm
重量	100g

### 深圳市神牛摄影器材有限公司

地址: 深圳市宝安区西乡街道海城社区工业路11号2楼111室  
电话: 0755-29609320(8062) 传真: 0755-25723423 邮编: godox@godox.com

### GODOX Photo Equipment Co., Ltd.

Add: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com

godox.com Made in China

### 维护保养

- 灯体在工作时, 如发现异常, 应立即关掉电源, 查明原因。
- 灯体应避免震动, 平时注意表面除尘。
- 灯体稍有发热为正常现象, 无特别需要时, 勿连续引闪。
- 维修概由本厂指定可供原厂配件之维修部负责。
- 本产品保修一年, 消耗品不在一年保修范围内, 内置锂电池保修六个月。
- 经发现, 擅自检修此灯, 将取消灯一年保修期, 维修需要收取相关费用。
- 如果本品出现故障或者被水淋湿, 在专业人员维修后方可继续使用。
- 设计和规格如有变更, 恕不另行通知。

### 产品保修

尊敬的用户, 本保修卡是申请保修服务的重要凭证, 请您配合销售商填写并妥善保管, 谢谢!

产品信息	型号	产品条码
用户信息	姓名	联系电话
通信地址		
销售商信息	名称	联系电话
通信地址		
销售日期		
备注		

#### 如何获得保修服务

您可直接与产品销售商或授权服务机构联系, 也可拨打神牛产品售后服务电话, 与我们联系。由我们的服务人员为您提供售后服务。申请保修时, 您需提供有效的保修卡作为保修凭证, 方获得保修服务。如您不提供有效的保修卡, 而在我们确认产品或部件属于保修范围的情况下, 也可以为您提供保修服务, 但恕不作为我们的义务。

#### 不适用保修的情况

如产品存在下列情况, 本文件项下的保证和服务将不适用:  
① 产品非原厂正品或私自维修; ② 人为损坏或不当使用、维护或保管导致的故障或损坏; ③ 不当搬运; ④ 非本产品合理预期用途使用; ⑤ 不当外力挤压; ⑥ 跌落或外力挤压; ⑦ 接触或浸入不当液体、液体、液体; ⑧ 不当改装或拆卸; ⑨ 因非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏; ⑩ 产品或部件原有识别信息被篡改或更改或涂改; ⑪ 非保修卡卡, 非原厂合法授权, 非原厂或第三方发行的软件造成的故障或损坏; ⑫ 因不可抗力或意外事件造成的故障或损坏; ⑬ 其他非因产品本身质量问题导致的故障或损坏。除上述情况, 您需提供相关责任方同意书, 声明对此不承担责任。因非在保修期或保修范围内的部件, 附件或软件导致产品不能正常使用, 不在保修范围内的故障。产品在经过正常使用的外观、性能和材料, 非保修范围内的故障。

#### 产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行:

产品类型	选项名称	保修期(月)	保修服务类型
部件	电路板	12	客户送修
	电池	3	客户送修
其他	充电器、电源线、同步线等带电性的配件	12	客户送修
	如闪光灯、滤镜灯池、外壳、保护罩、镜头盖、包装等。	无	无保修

注: 此表应由销售商盖章确认。

#### 适用产品

本产品适用于相关《产品保修信息》(在后面说明)所列产品。其他非此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

#### 保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算, 购买日以购买产品保修卡登记日期为准。

神牛产品售后服务电话 0755-29609320-8062

# LITEMONS

### Forward

This Bi-color LED Video Light LED6Bi is a multifunctional light with adjust color temperature and light brightness. Suitable for almost all shooting occasions e.g. live, make up, portrait and product shooting, video and recording, etc. It can be used on camera independently or in combination with easy operation and great portability.

 
#### Main Features

- Easy to adjust color temperature and brightness
- With built-in lithium battery and the light can be charged through Type-C USB port
- Can be used independently or in combination with cold shoe mounting base and slots
- Fashionable, easy operated and portable

### Warning

- △ As this product do not have waterproof function, please take measures of waterproof in rainy or damp environment.
- △ Do not use the flash unit in the presence of flammable gases, chemicals and other similar materials. In certain circumstance, these materials may be sensitive to the strong light emitting from this flash unit and fire or electromagnetic interference may result.
- △ As this product has built-in lithium battery, do not disassemble, impact, squeeze or put it into fire. If serious bulge occurs, please do not use. Do not use or store the product if the ambient temperature reads over the range of -10°C to 45°C. Please charge the product with included adapter and correctly operate it within the defined voltage and working temperate according to the instruction manual.

### Names of Parts

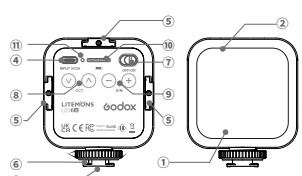

- 01. LED Beads
- 02. Diffusion
- 03. 1/4 Cold Shoe Mounting Base
- 04. Type-C USB Charging Port
- 05. Cold Shoe Slot
- 06. Cold Shoe Base
- 07. Power Switch
- 08. Color Temperature Adjustment Button
- 09. Brightness Adjustment Button
- 10. Battery Level Indicator
- 11. Button Indicator

### What's in the Box

- Light Body \*1
- 柔光罩 \*1
- Type-C USB Cable \*1
- 说明书 \*1

### Battery

1. This flash unit has built-in 1800mAh Li-ion battery which is non-detachable.
2. It is reliably safe. The inner circuit is against overcharge, overdischarge, overcurrent, and short circuit.
3. Charge the battery by using the 5V 2A charger.

#### Cautions:

1. No over 24 hours' continuous charging.
2. Store in dry, cool, ventilated places.
3. Do not put aside or into fire.
4. Dead batteries should be disposed according to local regulations.
5. Please charge the battery to approx. 70% before being placed for long time.
6. If the battery had ceased using for over 3 months, please make a full recharge.
7. It's normal that the battery will be degraded after a period's usage for the battery life limitation.
8. It is recommended that the user can adjust the brightness to 100% only when the battery is fully charged for 2 grids.
9. After the battery power is used up, it is recommended that the USB power supply side charging and using should not be greater than the brightness of 6 gear.

### Operation

#### 1. Light Setting

- 1.1 Power ON/OFF  
Push the power switch to ON to turn on the light while OFF to turn it off.

### 1.2 Color Temperature Adjustment

Press the upper adjustment button ● to increase the color temperature value while lower button ● to decrease. Long press the button to adjust the value from 3200K to 6500K in 9 levels quickly. When the color temperature value is up to the maximum, the indicator will be blinking.

#### 1.3 Brightness adjustment

Press the ● adjustment button to increase the brightness value while ● button to decrease. Long press the button to adjust the brightness value from 10 levels quickly. When the brightness value is up to the maximum, the indicator will be blinking.

#### 1.4 Installation and Multi Usage

The light can be fixed on the equipment with cold shoe or hot shoe through its cold shoe mounting base. It can be fixed on the equipment with 1/4"sockets e.g. pan-tilt, tripod and light stand. And the three cold shoe sockets enable this light to be installed on the equipment with cold shoe mounting base. The lights can be used in combination.



### Technical Data

Model	LED6Bi
Built-in Lithium Battery	1800mAh
Power Source of Charging	5V/2A
Power	Max. 6W
Color Temperature Range	3200K-6500K (in 9 levels)
100% Illuminance	360
(LUX)(0.5m)(=)	
CR1(=)	95
Brightness Range	In 10 levels
Duration	1.5H-10H
Working Environment Temperature	-10~45°C
Dimension	77*66*30 mm
Net Weight	100g

### Maintenance

- Shut down the device immediately should abnormal operation be detected.
- Avoid sudden impacts and the product should be dedusted regularly.
- It is normal for the light beads to be warm when in use.
- Avoid continuous flashes if unnecessary.
- Maintenance of the light must be performed by our authorized maintenance department which can provide original accessories.
- This product, except consumables, is supported with a one-year warranty. Lithium battery is supported with six months warranty.
- Unauthorized service will void the warranty.
- If the product had failures or was wetted, do not use it until it is repaired by professionals.
- Changes made to the specifications or designs may not be reflected in this manual.

### FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
Seller Information	Name	Contact Number
	Address	Address
	Address	Address
Note:	Date of Sale	

Note: This form shall be sealed by the seller.

#### Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

#### Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty date when the product is bought for the first time. And the purchase date period is calculated from the date registered on the warranty card when buying the product.

#### How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope but that shall not be considered as our obligation.

#### Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. The product or accessory has expired its warranty period; ②. Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging into external equipment, falling off or loosening by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc.; ③. Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alteration, addition and despatchment; ④. The original identifying information of product or accessory is modified, altered, or removed; ⑤. No valid warranty card; ⑥. Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦. Breakage or damage caused by force majeure or accident; ⑧. Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility for the damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal deterioration, abrasion and consumption are not the breakage within the maintenance scope.

#### Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Name	Maintenance Period(months)	Warranty Service Type
Parts		
Circuit Board	12	Customer sends the product to designated site
Battery	3	Customer sends the product to designated site
Electrical parts e.g. battery charger, power cord, sync cable, etc.	12	Customer sends the product to designated site
Other items		
Flash tube, modeling lamp, lamp body, lamp cover, locking device, cable, etc.	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062