

直接安装机顶灯柔光箱  
With speedlite softbox



可装保荣卡口柔光箱  
With Bowens-mount softbox



可装标准反光罩  
With reflector



▶ 可装束光筒  
With snoot




▼ 可装摄影伞  
With photo umbrella



▶ 可装雷达罩  
With beauty dish



▶ 可装大蜂巢  
With barndoor kit



Godox 神牛

# S2闪光灯支架

## S2 Speedlite Bracket



深圳市神牛摄影器材有限公司

GODOX Photo Equipment Co., Ltd.

地址/Add: 深圳市宝安区福海街道德展社区德川工业区厂房2栋1层至4层、4栋1层至4层  
1st to 4th Floor, Building 2/ 1st to 4th Floor, Building 4, Yaochuan Industrial Zone, Tangwei  
Community, Fuhai Street, Bao'an District, Shenzhen 518103, China

电话/Tel: +86-755-29609320(8062)

传真/Fax: +86-755-25723423

邮箱/E-mail: godox@godox.com

http://www.godox.com

705-S20000-00

Instruction Manual

说明手册

Chinese English Bilingual | 中英文双语

## 使用方法/Operation Guide

以S2型闪光灯支架(保荣卡口)为例:

Take the S2 S-type Speedlite Bracket (Bowens mount) as an example:


- **固定闪光灯。**

Fix the flash body.




- **拧松把手处的螺丝后调节支架角度。**

Loosen screw of the handle for adjusting bracket direction.

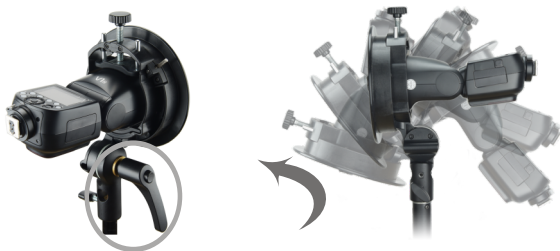


- **安装简易柔光箱。**

Mount speedlite softbox.

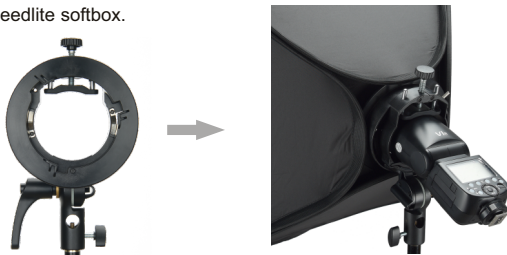

- **安装保荣卡口附件。**

Mount Bowens-mount accessories.

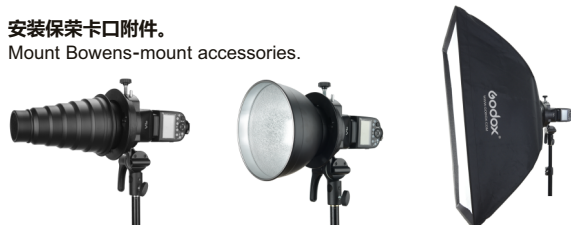

- **水平固定**

Mounted Horizontally



- **直立固定**

Mounted Vertically



- **可安装各种尺寸的机顶灯和J灯**

Fit for size-variable speedlites and barebulb flashes

常态: 可装各类机顶闪光灯, 如V860II系列、TT685系列、TT350系列、AD200Pro口袋灯(方形灯头)等。

Usually: install various of camera flashes e.g. V8660II series, TT685 series, AD200Pro pocket flash with speedlite flash head, etc.



取出第一层垫片: 可装V1系列圆头机顶灯、AD200Pro口袋灯(圆形灯头)等。

Take out the first layer: install V1 round head flash, AD200Pro pocket flash with round flash head, etc.



取出第二层垫片: 可装AD400Pro外拍灯等。

Take out the second layer: install AD400Pro outdoor flash.

